



Maintenance Schedule

Maintenance Schedule

Item	Function Required	Weekly	3 Months or 3,000 Miles	6 Months or 6,000 Miles	12 Months or 12,000 Miles
Brakes	Test that they are operational.	At Every Use			
Brake Adjustment	Adjust to proper operating clearance (not required with Nev-R-Adjust® brakes).		■		
Brake Magnets	Inspect for wear and current draw.			■	
Brake Linings	Inspect for wear or contamination.				■
Brake Controller	Check for correct amperage and modulation.			■	
Brake Cylinders	Check for leaks, sticking.				■
Brake Lines	Inspect for cracks, leaks, kinks.				■
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				■
Breakaway System	Check battery charge and switch operation.	At Every Use			
Hub/Drum	Inspect for abnormal wear or scoring.				■
Wheel Bearings and Cups	Inspect for corrosion or wear. Clean and repack.				■
Seals	Inspect for leakage. Replace if removed.				■
Springs	Inspect for wear, loss of arch.				■
Suspension Parts	Inspect for bending, loose fasteners and wear.			■	
Suspension Wet Bolts & Equalizers	Grease.		■		
Extreme Duty Bushings	Grease.		■		
Hangers	Inspect welds.				■
Wheel Nuts and Bolts	Tighten to specified torque values.		■		
Wheels	Inspect for cracks, dents, or distortion.			■	
Tire Inflation Pressure	Inflate tires to mfg's specifications.	■			
Tire Condition	Inspect for cuts, wear, bulging, etc.		■		